



X294 User Guide

User Guide

Welcome

Thank you for purchasing the Micromax X294 mobile phone. Your X294 gives you the following exciting features and much more:

- Dual SIM
- 2.6 Inch screen
- Multimedia
- FM Radio
- Call Recording
- Bluetooth/WAP
- Blacklist and Whitelist
- Theft Tracker
- Memory card support (up to 8 GB)

To obtain the best performance of your phone and to know its full range of features, please read this user guide carefully.

User Guide

Table of Contents

1 Know Your Phone.....	1	4.9 Mark Multiple Contacts.....	10
1.1 Phone Layout.....	1	4.10 Export and Import	10
1.2 Keys and Parts.....	2	4.11 Phonebook Settings.....	11
1.3 Icons and Indicators	3	5 Call Logs.....	11
2 Getting Started.....	4	5.1 View Dialed Calls	12
2.1 Insert SIM Card.....	4	5.2 View Missed Calls.....	12
2.2 Insert Memory Card.....	5	5.3 View Received Calls	13
3 Basic Operations	6	6 Messages.....	14
3.1 Switch Phone ON/OFF.....	6	6.1 Write SMS.....	14
3.2 Make a call	6	6.2 Write MMS.....	14
3.3 Answer a Call	7	6.3 Read a Message.....	14
3.4 Start a Call Conference.....	7	6.4 Read a Drafted Message	15
4 Phonebook	7	6.5 Read Outbox Messages.....	15
4.1 Add New Contact.....	8	6.6 View Sent Message	16
4.2 Search for a Contact	8	6.7 Broadcast Messages	16
4.3 Send Text Message.....	9	6.8 Templates	16
4.4 Call a Contact	9	6.9 Message Settings	17
4.5 Send Multimedia Message	9	7 Multimedia	18
4.6 Send Vcard	9	7.1 Take Photos.....	18
4.7 Blacklist a Contact	10	7.2 Image Viewer	18
4.8 Whitelist a contact	10	7.3 Record videos	18

User Guide

7.4	Play Videos	19	12.5	Network Settings	31
7.5	Menu >Music.....	19	12.6	Security Settings	31
7.6	Record Sounds	19	12.7	Restore Factory Settings.....	32
7.7	Play FM Radio	20	13	Health and Safety Precautions	
8	File Manager	21	33		
9	Applications	22	14	Taking Care of Your Device	35
9.1	M! Store	23			
9.2	M! Zone	23			
9.3	Google	23			
10	Organizer.....	24			
10.1	View Calendar	24			
10.2	Schedule Tasks.....	24			
10.3	Schedule Alarm.....	24			
10.4	World clock.....	25			
11	Connectivity	26			
11.1	WAP.....	26			
11.2	Data Account.....	26			
11.3	Bluetooth	27			
12	Settings	28			
12.1	Set User Profiles.....	28			
12.2	Dual SIM Settings.....	29			
12.3	Phone Settings.....	29			
12.4	Call Settings	30			

1 Know Your Phone

1.1 Phone Layout



User Guide

1.2 Keys and Parts

Some of the important keys and parts are listed here to help you use the phone better.

SN	Keys	SN	Keys
1	Receiver	8	* key
2	LCD Screen	9	# Key
3	Left key	10	Camera Lens
4	Right key	11	Speaker
5	Call key	12	Earphone Socket
6	End key	13	USB Socket
7	Number Keys		

User Guide

1.3 Icons and Indicators


Icons	Indicators	Icons	Indicators
	SIM 1 signal strength		Alarm has been set
	SIM2 Signal strength		Bluetooth is on
	Current alert type is ring only		Java connected
	Current alert type is vibration		Battery level
	Current alert type is vibration and ring		New missed calls
	Current alert type is vibration then ring		Keypad locked
	Current alert type is silent		The headset is being used

2 Getting Started

2.1 Insert SIM Card

The X294 is a Dual SIM mobile phone allowing you to use two SIM Cards. To insert SIM card(s):

1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the SIM card correctly in the card slot(s) as shown below.

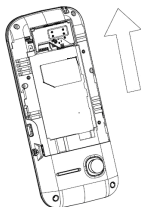


3. Finally, insert the battery and replace the rear cover of the mobile phone.

2.2 Insert Memory Card

To insert the memory card:

1. Switch off the phone and remove the rear cover and the battery.
2. insert the memory card as shown in the following diagram.

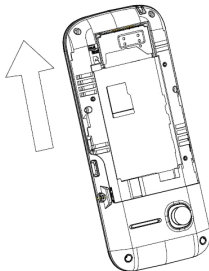

Recommendation: Use only compatible memory cards approved by Micromax. Incompatible cards may damage the slot or corrupt the data stored in the card.

3 Basic Operations

3.1 Switch Phone ON/OFF

- To switch ON your phone, press and hold the **End key** for a few seconds.
- To turn OFF your phone, press and hold down the **End key** for a few seconds.

If the phone lock has been activated, you need to enter the 4-digit password to unlock. (The preset unlock code is 0000.) If the SIM card has been inserted in the phone, and the related PIN code protection is activated, you need to enter the 4-8 digit password to unlock.

Warning: If you enter three wrong PIN codes in a row, the SIM card will be locked and you need to enter the PUK code to unlock it. Contact your network provider for the PIN and PUK code.

3.2 Make a call

You can make a call in the following ways:

- Enter the desired number in standby mode and press the **Call key**.
- Go to **Menu > Phonebook** and then select and call the desired number.
- Just press the **Call key** in standby mode to call the contacts listed in Call logs.
- You can also call a contact from the messages.

User Guide

3.3 Answer a Call

Press the **Answer** key, or select **Options > Answer** to answer a call.

3.4 Start a Call Conference

You can talk with more than one person at the same time through call conference.

1. While on a call, dial another contact. Once the new call gets connected, the first call will be put on hold.
2. After this, press **Options** and then choose **Conference**.

Note: This is network dependent and you may need to contact your network operator to activate this feature.

4 Phonebook

Your phonebook stores all your saved contacts for anytime access. Your phonebook data can be stored in your SIM card or your phone memory. You can access your phonebook by going to:

Menu > Phonebook

You can press the right and left navigation keys to access the phonebook tabs which shows you:

- **All List:** All contacts existing in phone and SIM Card(s).

User Guide

- **Phone list:** Contacts existing in phone memory.
- **SIM1 list:** Contacts existing in SIM1 memory.
- **SIM2 list:** Contacts existing in SIM2 memory.
- **Caller Groups:** Allows you to create a new caller group with common preferences.

4.1 Add New Contact

You can add new contacts to the Phone List, SIM 1, SIM 2.

Menu > Phonebook

To add a new contact:

1. Select **Menu> Phonebook>Add new contact**.
2. Select any of the SIMs, or phone memory for saving the contact.
3. Enter the contact name and number.
4. Save the number.

4.2 Search for a Contact

To search for a contact:

Menu > Phonebook and then type in the first few letters of the search bar.

4.3 Send Text Message

Menu > Phonebook

Highlight a number, press **Options** and then select **Send Text message**.

4.4 Call a Contact

Menu > Phonebook > Options > Call

Search or highlight a contact in phonebook and make a call.

Alternatively

While in standby mode, just type in the desired number and press the **Dial** key.

4.5 Send Multimedia Message

Menu> Phonebook> Options

On the highlighted number, press **Options** and then select **Send multimedia message**.

4.6 Send Vcard

Menu > Phonebook > Options > Send vCard

Allows you to send business card via SMS, MMS, or Bluetooth to other contacts.

4.7 Blacklist a Contact

Menu > Phonebook > Options > Add to Blacklist

Allows you to blacklist the currently highlighted contact.

4.8 Whitelist a contact

Menu > Phonebook > Options > Add to whitelist

Allows you to whitelist the currently highlighted contact.

4.9 Mark Multiple Contacts

Menu > Phonebook > Options > Mark several

Allows you to mark single or several contacts to send SMS, vCard, manage contacts.

4.10 Export and Import

Menu > Phonebook > Options > Export and Import

Allows export or import of phonebook contacts or business cards.

User Guide

4.11 Phonebook Settings

Menu > Phonebook> Options> Phonebook settings

Through the phonebook settings, you can set various phonebook preferences such as:

- **Speed Dial:** Assign speed dial to desired numbers or activate/deactivate speed dial.
- **My Number:** Edit my number.
- **Extra Numbers:** Add fixed dial numbers which lets you restrict the outgoing calls to only certain numbers.
- **Memory Status:** Check the memory status of the SIM and Phone.
- **Copy / Move/ Delete all Contacts:** Allows you manage contact.

5 Call Logs

Menu> Call Logs OR press Call key

- Press the Left or Right navigation keys to access the call log tabs.
- Press call key in standby mode to enter the call logs:

Pressing the Left key on the call logs gives you a host of call log management options including advanced features.

- **View:** View the desired entry

User Guide

- **Call:** Call the desired entry
- **Send text message:** To write SMS to send to the number.
- **Send multimedia message:** To write MMS to send to the number.
- **Add to Blacklist:** Add the number to the blacklist.
- **Add to Whitelist:** Whitelist the selected number.
- **Edit before call:** Edit the number before call.
- **Delete:** To delete the entry.
- **Delete all:** Delete all the call log entries.
- **Mark several:** Mark several call logs.
- **Advanced:** Including Call times/Text msg. counter/GPRS counter

5.1 View Dialed Calls

Press the right or left navigation keys to access your dialed calls.

5.2 View Missed Calls

Press the right or left navigation keys to access your missed calls.

5.3 View Received Calls

Press the right or left navigation keys to access your Received calls.

6 Messages

6.1 Write SMS

Menu > Messages > Write message>Text message

Compose and send SMS. Pressing **Left** key during/after writing the message gives you a host of text messaging options.

6.2 Write MMS

Menu > Messages > Write message>Multimedia message

Compose and send MMS. Pressing **Left** key during/after writing the message gives you a host of MMS options.

6.3 Read a Message

Menu > Messages > Inbox

Allows you to read you received messages.

User Guide

To read a message, highlight the desired message in the inbox and press **OK**.

While highlighting a message, you can go to **Options** and forward, delete, sort, mark for deletion or copy, move or copy to phone or view details.

While reading a message, you can select Left key to access the following.

- **Reply , Call sender, forward, delete,**
- **Advanced:** You can do the following under advanced:
 - Use number, Use URL, email, USSD
 - Copy/move to SIM

Note: USSD allows you to access menu and/or response based services from the network provider.

6.4 Read a Drafted Message

Menu > Messages> Drafts

Drafts folder stores the messages that were saved for sending later. While reading a drafted message, you can press Left key to access a host of features:

6.5 Read Outbox Messages

Menu > Messages > Outbox

All the messages that are sent from your phone and fail to get delivered to the recipient are stored

User Guide

under the 'outbox' folder.

You can select **options** to access a host of features.

6.6 View Sent Message

Menu > Messages > Sent messages

View all the messages sent to various recipients under this folder.

While reading a sent SMS, you can select **options** to access a host of features:

6.7 Broadcast Messages

Broadcast message is an information service to all GSM users in a specific location sent by the network operator, such as weather forecast, transportation conditions and so on. You can access this feature via:

Menu > Messages > Broadcast message

You can choose your broadcast message mode and settings also as required.

6.8 Templates

Templates stores preloaded/pre-written text messages for ready usage

6.9 Message Settings

Menu>Messages> Settings

You can set your SMS and MMS and service message using this feature.

SMS Settings:

- **Text Message:** For text message, you can do message settings for your SIM cards including SMS Blacklist, SMS Backup, and also view memory status.
- **Multimedia Message:** For MMS, you can set the data account and common MMS settings:
- **Service Message::** You can configure service message such as:
 - **Enable Push:** Accept all service messages, or with condition or disable all service messages.
 - **Enable Service Loading:** Prompt, auto launch or disable when service messages arrive.
- **Schedule SMS:** Enable this function, the phone can send a message you edited automatically at the time you set.

7 Multimedia

7.1 Take Photos

Menu > Multimedia > Camera

You can take good quality videos with your X294 Mobile phone. You have the following options under your video recorder. Use the **Up** and **Down** keys to navigate through these options. Use the **Left** and **Right** keys to choose the settings.

7.2 Image Viewer

Menu > Multimedia > Image viewer

Use the image viewer to view images stored in the memory card or phone memory.

7.3 Record videos

Menu > Multimedia > Video recorder

You can take good quality videos with your X294 Mobile phone.

Press Left key to set the various preferences for your video.

7.4 Play Videos

Menu > Multimedia > Video Player

When you highlight a video, you have the following options:

- **Play:** Play the video file.
- **Refresh list:** Refresh the video list.
- **Setting:** Enable or disable the List auto gen.

Press 0 key while playing a video to display it in full screen mode.

7.5 Menu > Music

The Micromax X294 comes with an inbuilt music player that plays all your favorite music stored in the memory card. It gives you a host of settings to make your listening experience interesting.

When you highlight a music file and press the left key to set a host of preferences:

7.6 Record Sounds

Menu > Multimedia > Sound Recorder

You can record sounds with your mobile phone. On the Sound Recorder list screen, you can select:

- **New Record:** Begin recording new sounds from your phone.
- **List:** List all the recorded files.

User Guide

- **Settings:** Set some relevant parameters for the sound recorder.

7.7 Play FM Radio

Menu > Multimedia > FM radio

Your phone comes with an FM radio to let you listen to FM channels.

- Press the number keys on your keypad in accordance to the channel list. If this does not work, perform an auto search once.
- Press OK key to start/stop the radio.
- Press the # or * key to increase/decrease the volume.
- Press **Options** to use the various features of the FM radio.

8 File Manager

Menu > File Manager

The file manager allows you to view and manage your files stored in the memory card.

Menu > File Manager> Options

At the memory card level, pressing Left key allows you to:

- **Open:** Open the current file or folder.
- **Format:** Format the Memory card.
- **Details:** View the details of the memory card.
- **Rename:** Rename the memory card

9 Applications

Menu > Applications

The X294 provides you the following applications:

Access a host of useful applications such as:

- Mi-Apps: Lets you access a host of applications like:
 - o MRE: Lets you access and play Games.
 - o Java: You can access Opera mini 4 to browse the Internet.
 - o Java settings: To set java games or java applications.
 - o Java default security: Set security for Java applications.
- Fun and games:
- Calculator
- Stopwatch
- Text Reader
- Notes
- Unit Converter
- Currency Converter

Your phone also comes with the following applications on the main menu:

User Guide

9.1 M! Store

Menu > M! store

You can access live.micromaxinfo.com and download wallpaper, music ringtones and so on for your phone.

You need Internet connection for this service. Please refer to **Connectivity** on how to connect to the Internet.

9.2 M! Zone

Menu > M! Zone

You can enjoy a host of entertaining services from here.

9.3 Google

Menu > Google

Press the  key on the keypad to access Google. You need Internet connection to enjoy Google. Please refer to section 11 (Connectivity) on how to connect to the Internet.

10 Organizer

Menu > Organizer

Your phone provides you with the capability to organize your files, routines and tasks.

10.1 View Calendar

Menu > Organizer> Calendar

Allows you to view the Calendar and go to particular dates. Pressing Left key while viewing the Calendar allows you to:

- You can add events, Jump to particular date
- Go to today, toggle between Weekly or monthly view

10.2 Schedule Tasks

Menu > Organizer> Tasks

Lets you schedule tasks on desired dates with alarm, priority, periodicity etc.

10.3 Schedule Alarm

Menu > Organizer> Alarm

The time format of the alarm clock is the time with the format in the clock. The alarm clock can work

User Guide

even if the phone is switched off as long as there is enough power in the battery. Alarm time, snooze time-out and alarm tone can be set independently for every alarm.

10.4 World clock

Menu > Organizer> Word clock

- **World Clock:** View the time zones of major cities and also assign a time zone to your current location.

11 Connectivity

11.1 WAP

Menu > Connectivity > WAP

Lets you configure the WAP settings for accessing the Internet such as default homepage, browser options and other preferences.

Note: In case your network provider does not send the data account and WAP settings, you can do WAP settings for on your own.

11.2 Data Account

Menu > Connectivity> Data Account

You can connect to the Internet via GPRS connection. For this you need to set up a data account.

1. Go to **Menu> Connectivity**.
2. Select **Data Accounts**, and select from the list of default data accounts listed by your network provider's SIM.

By default, your network provider sends the data account and WAP settings via SMS, or it comes with your SIM card. You can thus choose from the listed data accounts. If the Data accounts are not listed by default, please contact your network provider for the same.

11.3 Bluetooth

Menu >Connectivity> Bluetooth

Allows you to enable/disable or configure Bluetooth.

Selecting **Menu > Bluetooth> Options** gives you the following options:

- **Power:** Turn Bluetooth On/Off.
- **Visibility:** Set the visibility of your device against other Bluetooth devices.
- **My Device:** Display device model when connected.
- **Search audio devices:** Search for hands-free devices that supports Bluetooth. Pairing up with Bluetooth enabled audio devices allows you to exchange audio or video information with such devices.
- **My Name:** Displays the name of my phone as it appears to other Bluetooth devices.
- **Advanced:** Set your Bluetooth preferences. You need to first activate Bluetooth perform advanced settings.

12 Settings

Menu > Settings

You can perform various settings for your mobile phone using this feature.

12.1 Set User Profiles

Menu > Settings> User Profiles

Set your user profile as well as customize that profile to suite your requirement.

Your phone provides a set of default profiles including:

- General
- Silent
- Meeting
- Outdoor
- Power Save
- My style

You can highlight any of the above profiles and press the **OK** key to activate that profile. Or, you can press the Left key to activate or customize that profile.

- You can set the parameters under different profile such as alert type, ring type, SIM1/SIM2 incoming ringtone volume, message tone and volume, keypad tone and volume, tones and system

alert.

12.2 Dual SIM Settings

Menu > Settings> Dual SIM settings

With this feature, you can activate SIM 1, SIM 2 or Dual SIM on your phone.

12.3 Phone Settings

Menu > Settings> Phone Settings

You have a host of useful phone settings that allows you to tune your phone with your changing requirements:

- **Time and date:** Lets you set the time and date on the phone.
- **Schedule power on/off:** Lets you set a particular time on the phone when the phone should Power on/off itself.
- **Language:** Choose the phone display language.
- **Pref. input method:** Choose your desired input method.
- **Display:** Choose display settings such as Wallpaper, screensaver, backlight date and time, operator name and so on.
- **Shortcuts:** Set shortcuts for FM Radio, torch, camera Bluetooth, inbox and so on.

User Guide

- **Dedicated Key:** This option helps you dedicate/map certain features of the phone with the Directional keys (UP/DOWN) of the phone.
- **Auto update time:** Auto update the time.
- **Flight mode:** You have two options: Normal mode and Flight mode.
- **UART Settings:** This option can be activated for either SIM1 or SIM2. With this option, you can choose the access of PC software to SIM1 and SIM2.
- **Setup Wizard:** To guide you to set up the phone.

12.4 Call Settings

Menu > Settings> Call Settings> SIM 1/SIM 2Call Settings

You have the following options under call settings:

- **SIM 1/SIM 2 Call Settings:** Set the call settings for the selected SIM.
- **Advanced Settings:**

Blacklist: Add the number to a blacklist to block the person's calls. Blacklist a single or list of up to 20 contacts. Also allows you to activate or deactivate blacklist mode.

Whitelist: Only the number in the whitelist can call in.

Auto Redial: Activate or deactivate auto-redial.

Call Time Display: Display the call time.

Call Time Reminder: Activate or deactivate call time reminder. This can be on a single or periodic

User Guide

basis.

Auto Quick end: This option enables you to set a specific time after which the call will be terminated automatically.

Reject by SMS: Reject calls with SMS

- **Answer Mode:** Set to any key press answer or handset mode.

Automatic call recording: Turn on this function, the phone will recording your conversation automatically.

Health dialing: Enable this function, the phone will vibrate when the call is answered from other end.

12.5 Network Settings

Menu > Settings> Network Settings

Depending on whether you activate SIM 1 or SIM 2 or both, you can set the following:

- **SIM 1:** Lets you select the network and set associated preferences for SIM 1.
- **SIM 2:** Lets you select the network and set associated preferences for SIM2.
- **GPRS transfer pref.:** You have two options: Data prefer and Call prefer.

12.6 Security Settings

Menu > Settings> Security Settings

User Guide

Provides you the following security options:

- **SIM 1/SIM 2 security:** Lets you set up passwords against illegal use of SIM 1 or SIM 2.
- **Phone security:** This function can be used to lock the phone and prevent unwanted users from using your mobile phone without permission (default code is 0000). After enabling the phone lock, you must enter the correct password each time you power on the mobile phone.
- **Auto keypad lock:** After this function is activated, the keypad will be locked automatically after the set time when the phone is in standby without any operation.
- **Privacy Protection:** Includes protection for phone book, message and call history. If this function is enabled, corresponding menu or content will be locked. To access, enter the password. The default password is "0000".
- **Theft Tracker:** You have to set this function, in case your phone is stolen/lost Default password is 0000 to set this function.

12.7 Restore Factory Settings

Menu > Settings> Restore Factory Settings

The phone will prompt you to for a password (default is 0000). After running "Restore settings", your phone will be restored to the setting when you purchased the phone.

13 Health and Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.

SAR Compliance

- Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines..
- SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.
- The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories and other enhancements.
- The true SAR level during normal phone usage will be much lower than this level.
- The highest SAR value of this device at the head and body are 0.91 W/kg and 0.93 W/kg respectively averaged over 1 gm of human tissue.

SAR Recommendations

- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women
- Make sure the cell phone has a low SAR.
- Prefer to use your cell phone when the signal quality is good.

User Guide

- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- Maintain a preferable distance of 15 mm from the device..

Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.

In Hospitals

- Your Phone's radio waves may interfere with the functioning of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator:
 - Always keep your phone at least 15.3 centimeters (6 inches) from the medical device.
 - Do not carry the wireless device in a breast pocket.

User Guide

- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Unsafe Areas

- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.
-

14 Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it to the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.

User Guide

- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations:

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.

Recycle Your Phone

User Guide



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling. of such hazardous waste. Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment.

Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please refer to our website link: www.micromaxinfo.com/WEEE.php.

Disclaimers

1. The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.
2. Micromax keeps the right to make modifications to any of the content in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.